



Contest Logging Software

Free Software for Phone, CW, and Digital Modes

Find



🏠 ▶ N1MM Logger Documentation



N1MM Logger Documentation

1 Getting Started

1.1 Introduction

1.1.1 PC Requirements

1.2 Downloading the Software

1.3 Installing the Software

1.4 Digital Installation and Setup

1.5 Interfacing Basics

1.6 Setting Up for a Contest

1.7 Learning Your Way Around

1.8 Operating a Contest

1.8.1 Before the Contest

1.8.2 During the Contest

1.8.3 After the Contest

1.9 Finding Help

1.9.1 On-Line or Off-Line Documentation

1.9.2 N1MM Logger Discussion Groups

1.9.3 Tips and Tricks

1.9.4 Most Frequently Asked Questions or FAQ

1.9.5 Troubleshooting

2 Digging Deeper

2.1 Setup and Configuration

2.1.1	Program Installation and Setup
2.1.2	Configurer
2.1.3	The Contest Setup Dialog
2.1.4	Supported Contests
2.1.4.1	General Contest Logging - All Modes
2.1.4.2	Supported HF Contests - CW and SSB
2.1.4.3	Supported QSO Parties - CW and SSB
2.1.4.4	Supported VHF Contests - CW and SSB
2.1.4.5	Supported RTTY and PSK Contests
2.1.4.6	Supported User Defined Contests
2.1.4.6.1	The User Defined Contest Editor
2.1.4.7	My Contest Isn't Here
2.1.5	Contest Setup Instructions
2.1.5.1	Setup General Contest Logging - All Modes
2.1.5.2	Setup HF Contests - CW and SSB
2.1.5.3	Setup QSO Parties - CW and SSB
2.1.5.4	Setup VHF Contests - CW and SSB
2.1.5.5	Setup RTTY and PSK Contests
2.1.5.6	Setup User Defined Contests
2.1.6	Call History and Reverse Call History Lookup
2.2	Supported Radios
2.3	Key Assignments - Keyboard Shortcuts
2.4	Function Keys, Messages and Macros
2.4.1	Stored Messages and the Function Key Message Editor
2.4.2	Macros
2.4.3	ESM - Enter Sends Message
2.4.4	Function Key Examples
2.5	Interfacing
2.5.1	Serial Parallel and Sound Card Interfacing
2.5.2	USB Interface Devices
2.5.3	Supported Hardware
2.5.4	Rotator Control
2.6	Windows
2.6.1	Entry Window
2.6.2	Log Window
2.6.3	Bandmap Window
2.6.4	Telnet Window
2.6.5	Check Window
2.6.6	Available Mults and Qs Window
2.6.7	Info Window
2.6.8	Score Window

- 2.6.9 **Multipliers Window**
- 2.6.10 **Statistics Window**
- 2.6.11 **Skins Colors and Fonts Window**
- 2.6.12 **Visible Dupesheet Window**
- 2.6.13 **Grayline Window**
- 2.6.14 **CW Reader Window**
- 2.6.15 **Realtime Score Reporting**
- 2.6.16 **Network Status Window**
- 2.6.17 **Spectrum Display Window**

2.7 Digital Modes

- 2.7.1 **General RTTY and PSK Information**
- 2.7.2 **Digital Overview and Features**
- 2.7.3 **Digital Setup**
- 2.7.4 **Digital - MMTTY for RTTY Support**
- 2.7.5 **Digital - MMVARI for PSK and Other Modes**
- 2.7.6 **Digital - Fldigi for Sound Card Modes**
- 2.7.7 **Digital - External TNC Support**

2.8 Single Operator Contesting

- 2.8.1 **Single Operator Two VFO Operation (SO2V)**
- 2.8.2 **SO2V and SO2R Operation**
- 2.8.3 **SO2R - Single Operator Two Radio Operation**
- 2.8.4 **Single Operator Split Operation**
- 2.8.5 **Single Operator Call Stacking**

2.9 Multiple Computer and Multi-Op Contesting

2.10 Error Messages

2.11 VHF and Up contesting

3 References

- 3.1 **Third Party Software**
- 3.2 **Customizing the DXCC List**
- 3.3 **Technical Information**
- 3.4 **DX Clusters**
- 3.5 **UDP Broadcasts**
- 3.6 **Off Topic, But Nice to Know**

4 Frequently Asked Questions

- 4.1 **FAQ - Installing or Upgrading N1MM**
 - 4.2 **FAQ - Program Features**
 - 4.3 **FAQ - Digital Modes**
 - 4.4 **FAQ - Program Errors and Requests**
 - 4.5 **FAQ - Troubleshooting Soundcard Issues**
 - 4.6 **FAQ - Other Questions...**
 - 4.7 **FAQ - Website Questions and Answers**
-

Last Modification: 20 July 2016 14:16:52 EDT by K8UT.

© Copyright 2004-2016 - N1MM Logger. All rights reserved