

HANDHELD RADIO SCANNER

Quick Start Guide

WS1010

START HERE!

Package Contents:



Scanner



Antenna



AC Adapter



Rechargeable Battery Holder



Battery Holder



Belt Clip

See the Owner's Guide for complete instructions



1 INSTALL BATTERIES

1



Rechargeable Battery Holder



Alkaline Battery Holder

1. Slide open the battery compartment.
2. Place 4 AA batteries into the correct battery holder matching polarity symbols (+ / -):
 - **Black** – Alkaline (non-rechargeable)
 - **Yellow** – Rechargeable Ni-MH or Ni-Cd
3. Place the battery holder into the battery compartment. The battery holder fits only one way. Do not force it.
4. Replace the cover.

2 CONNECT ANTENNA

2

1. Align the antenna slots with the tabs on the antenna jack.
2. Press the antenna down over the jack and turn the antenna's base clockwise.



3 PROGRAM FREQUENCIES

3



Find Frequencies:

Go to www.radioreference.com and locate a list of frequencies in your area.

Program Frequencies:

1. Preset squelch between 10 and 12 o'clock position
2. Press PGM to enter the program mode. Enter the channel number (1-200) where you want to store a frequency, then press PGM again.
3. Use the number keys and the period(.) key to enter the frequency.
4. Press ENT to store the frequency into the channel.
5. Press PGM to go to the next.
6. Press SCAN to begin scanning.