

ELECRAFT KX2 OWNER'S MANUAL ERRATA

Rev. A5-1, Sept. 9, 2016

New Feature

AM mode: AM mode is now available. To select AM, tap the MODE switch one or two times. AM mode can be removed from the MODE switch rotation by setting MENU:AM MODE to OFF. **AM Receive:** AM mode can provide a “warmer” sound when used to copy shortwave broadcast stations, and VFO tuning is less critical than when using SSB modes to copy AM. MENU:VFO CRS provides coarse-tuning selections of 1, 5, 9 and 10 kHz for AM mode. **AM Transmit:** AM is far less power-efficient than SSB, so SSB is preferred for most communication purposes. However, AM is still in use on the ham bands. A good place to look for AM signals is around 3.870 MHz at night. **Note:** Speech compression should in general be turned off when transmitting in AM mode (set MENU:TX CMP to 0).