



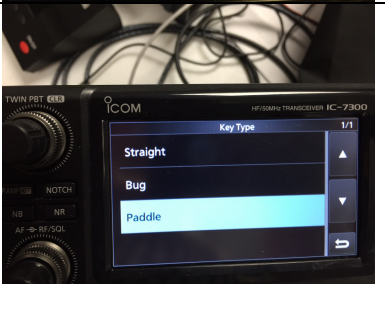


To change your IC-7300 to use an external keyer

<p>While in the CW mode, press the menu button on the 7300 main panel, then select “KEYER” on the screen</p>	
<p>Press the EDIT/SET button on the screen</p>	
<p>Then press CW-KEY SET on the screen</p>	
<p>Press the “down” arrow  if you don't see Key Type on the screen until you see Key Type. Press Key Type on the screen.</p> <p>On the Key Type screen, press on “Straight” on the screen</p> <p>This will select straight key mode.</p>	
<p>Exit out of the menu by pressing the EXIT button on the 7300 main panel</p>	