


Read and understand all instruction, warning, and danger labels.


Lea el manual de operación anexo sobre ensamblaje e inicio.

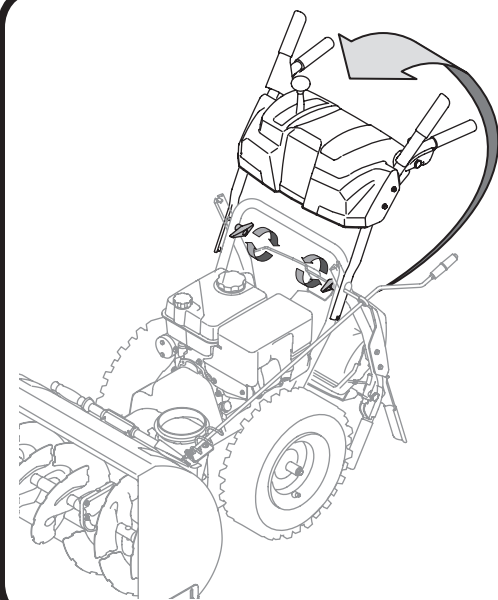

1


Place shift lever into F6 position.

Pivot upper handle into operating position and tighten handle knobs.

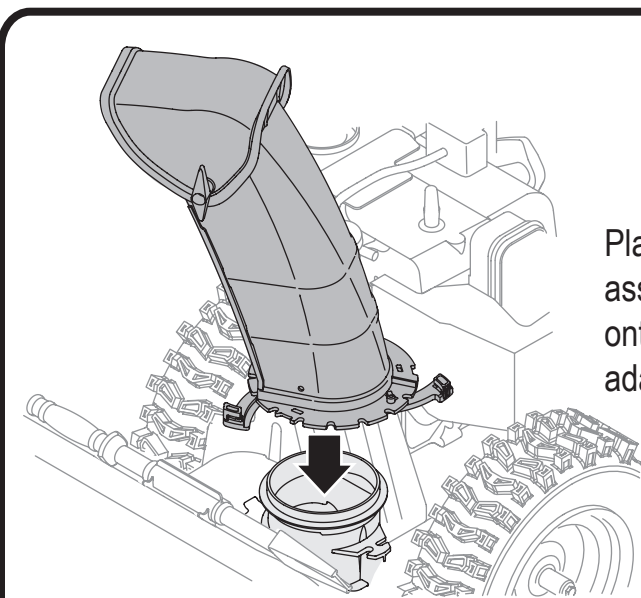



2

Place chute assembly onto chute adapter.

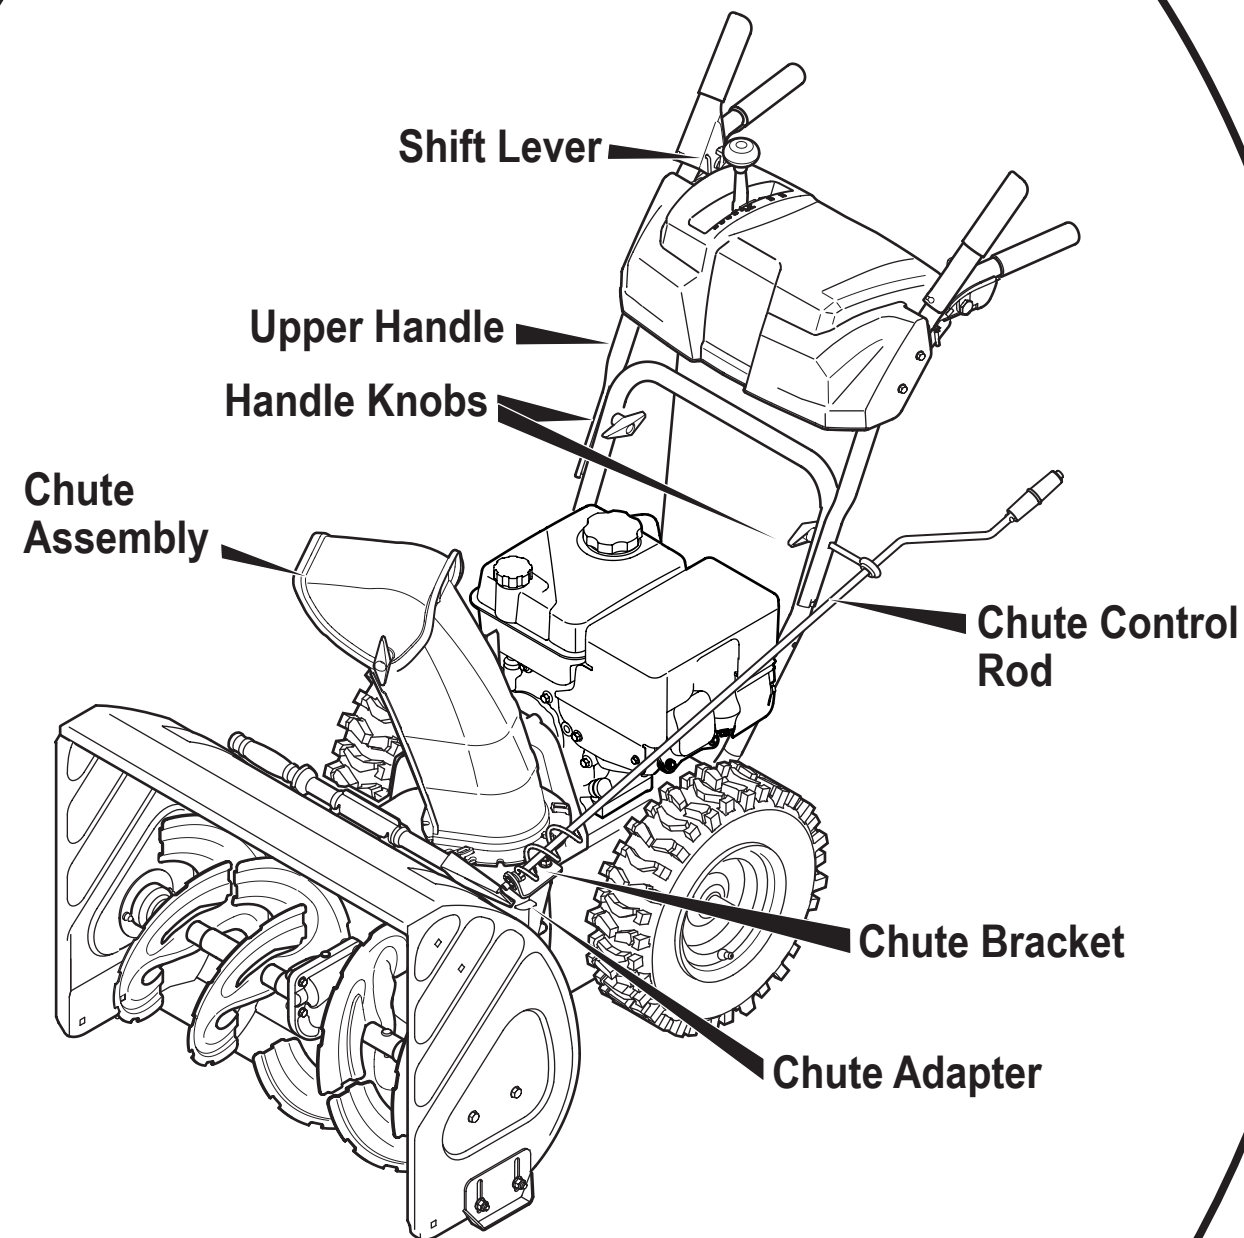


3


Close the three flange keepers. Keepers will click into place when properly secured.

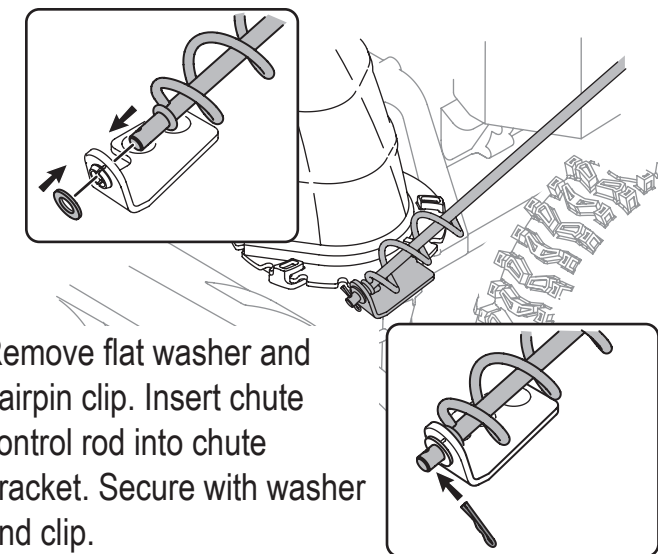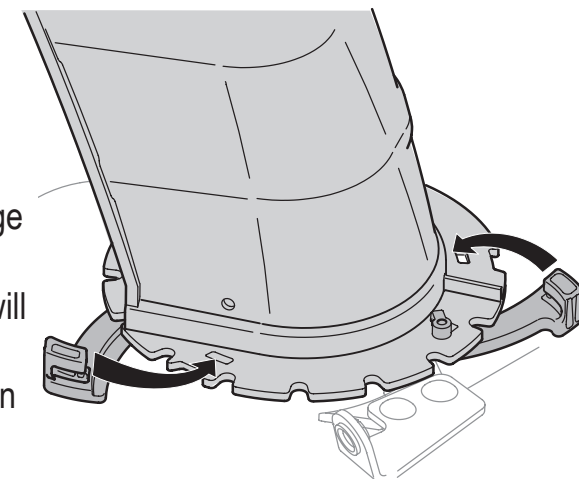

4


Remove flat washer and hairpin clip. Insert chute control rod into chute bracket. Secure with washer and clip.

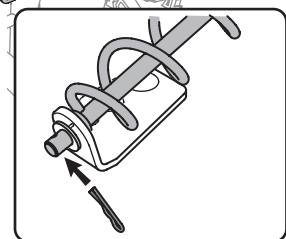

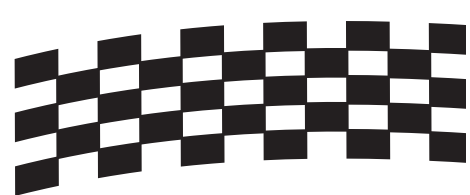


FAST START

GUIDE

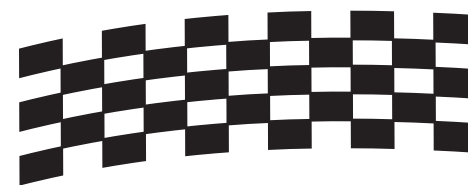


FAST START

GUIDE

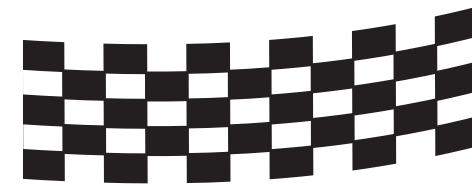

Read and understand all instruction, warning, and danger labels.


Lea el manual de operación anexo sobre ensamblaje e inicio.

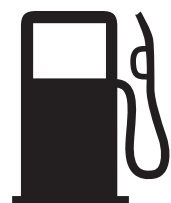

Fill tank with gas until fuel reaches the fuel level indicator.

Check oil level and fill if necessary.


5

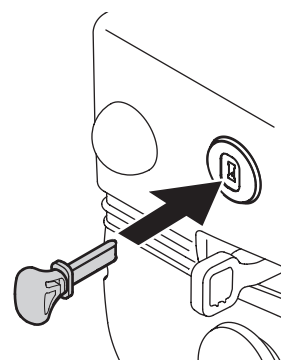

Push key into ignition slot. Be sure ignition key snaps into place.

Do not turn key.

6

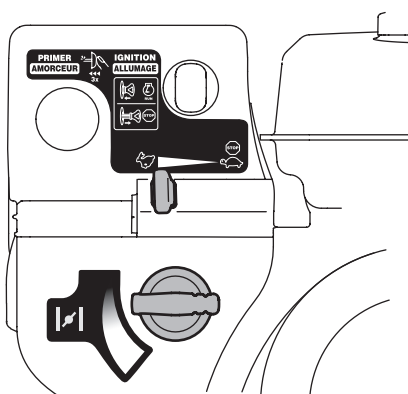


Move throttle control to fast (rabbit) position.

Activate choke by rotating clockwise.

7

If your home wiring system is not a Ground Fault Interrupted (GFI) three-wire grounded system, do not use the electric starter.

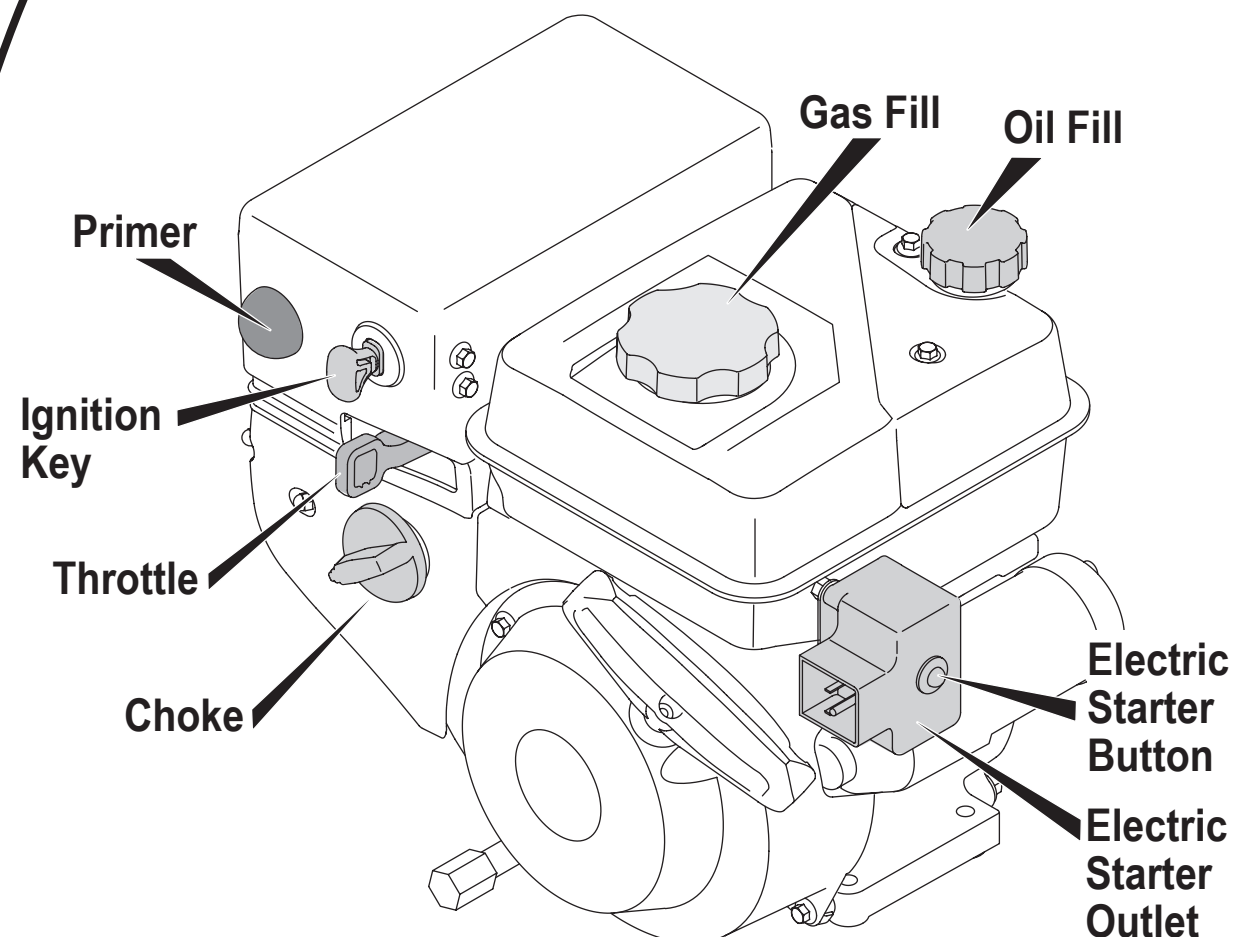


Need Help?

Call 1-888-TO-HELP-U
(1-888-864-3578)


8

Connect power cord to switch box. Plug other end of power cord into a three-prong 120-volt, grounded, AC receptacle.

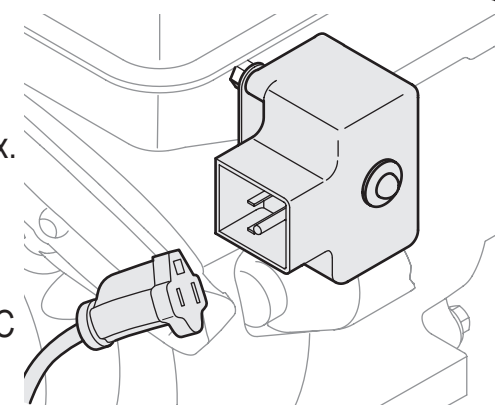


9

Push primer three times.

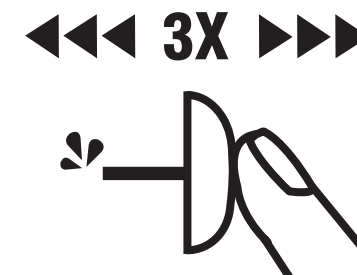

10

Push down on starter button for no more than five seconds to start engine. After starting, disconnect power cord from outlet first and then from snow thrower. Move choke control to OFF.

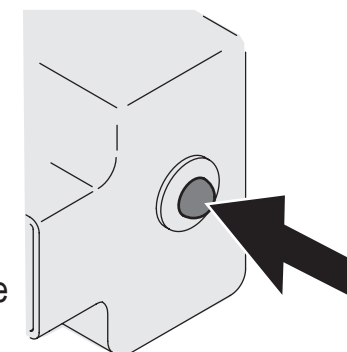

IMPORTANT: READ OPERATOR'S MANUAL AND ENGINE MANUAL THOROUGHLY AND FOLLOW THE SAFE OPERATION PRACTICES BEFORE OPERATING .

