

# SIM User's Guide

**By Ben Rejeb Nizar.**

**Dany ON4NB.**

**Irv W4IWK .**

**Peter KG6VQH**

Copyright © 2013  
29 July 2015

## Contents

Introduction .....	3
Distinctive features of SIM Highlights .....	4
System Requirements.....	6
Installation.....	7
Interface Settings (Sound Card +Transceiver) .....	8
Set input signal level .....	11
Set Transmit Power and Audio Level.....	11
Set Your Personal Info .....	13
Set your Station info .....	14
Favourite language menu .....	14
Status Indicators.....	15
On-Screen Controls.....	16
How to select a SIM station for starting a QSO .....	20
TX Macro's .....	21
Making QSO's.....	22
Log Book .....	23
Special Mouse Commands .....	24
Technical Description of SIM31 mode .....	25
FAQ (Frequently Asked Questions) .....	27

## Introduction

*SIM* is an experimental computer program, designed to facilitate basic amateur radio communications when using a very weak signal with ***SIM31***, a new QRP digimode specially designed for making reliable, confirmed QSOs under extreme conditions on all amateur bands.

***"SIM31"*** stands for **"Structured Integrated Message BPSK 31 bauds"**.

This new mode, using audio DSP techniques, provides an important message encoding innovation and thus a new simplified approach to the operation mode when compared to the already known modes, thereby overcoming some of the difficulties of communication between amateurs of the world..

It is designed to establish human to human contacts by exchanging full structured info with possible plain text option; But moreover, it also allows to initiate contacts with full automatic stations, even under noisy and **weak conditions as -18db S/N on 3000 Hz equivalent noise bandwidth**.

SIM mode require very stable oscillators in both transmitter and receiver. It needs a narrow bandwidth of less than 45Hz, No need of external modem; a 48 KHz windows compatible sound card model was just enough .

Compared to other digimodes, SIM31 is probably the only one to have that new kind of "Automatic QSO's mode" with translation functionality ( **Automatic translation of included structured messages only** ) Languages: English, French, Russian, Dutch, Spanish, Italian, German, Portuguese... The program does not translate plain typed text.

Remark : for the moment, due to our software limitation, only Latin characters are used, Russian characters was planed for advanced future versions.

Then, you can set your software in **Automatic mode** <Auto SIM QSOs>, and initiate a "full automatic call" SIM-PSK will

- Reply to the callsign who just answered manually to your callsign.
- Afterwards, it will detect and fill in all received info's concerning the current QSO, (Name, QTH, LOC, RSQ ...),
- At the end, **all info's about the QSO will be saved into the SIM-Logbook and optionally uploaded automatically, in real time, to one or more services of your choice : eQSL.cc , HRDLog.net, HAMQTH.com and HAMLog.eu or to local logbooks as Dx-Keeper, Mixw2, Logger32.**

The program does all that automatically, without any operator assistance...

Note: it's recommended never leaving your transceiver working alone without any presence!!

As you can guess, it is **only possible to upload a QSO** in real time when you have enabled this option, and if an internet connection is available.

Remark : **uploading your ADIF File** into an amateur radio service (eQSL.cc, LOTW ... ) could be made later, at the end of your contacts if you prefer ; up to you, it's in the menu tag "Log" .

SIM also implements a new mode "**SIM63**" running at twice the baud rate of SIM31.

You can make QSOs in both modes using nothing more than mouse clicks

## Distinctive features of SIM Highlights

SIM is an experimental amateur radio digital communications program optimized for making very weak signal contacts using a narrow bandwidth while decreasing the number of bits required to send a word. SIM uses the same sound card DSP technology used by most other digital communications programs.

Distinctive features of SIM are:

- Structured Messaging which compresses frequently used amateur radio phrases to a few bytes and translates phrases into the operator's native language. Currently supported languages are: **English, French, Russian, Dutch, Spanish, Italian, German, and Portuguese**. Note, the translation feature does not apply to typed text.

An expanded concept of varicode, to encompass not only individual characters but words and phrases.

"**Thanks for coming back to my call.**" Message, for example, is sent as only 6 characters rather than 34 characters as usually required.

- SIM decodes all SIM31 signals in a Signal Report panel displaying the type of call (CQ, CQ Auto, etc.), the call sign, and the country of origin among other info. Double-clicking on a call-sign, zeros in on that offset frequency and prepares SIM to respond.

Optionally, SIM can be configured to verbally announce new decoding's. This is great for monitoring while attending to other tasks near your communications equipment.

The Signal Report panel can be configured to automatically report decoded call signs and your transmissions to PSK-Reporter.

- Rather than a waterfall, SIM displays signals in a 2800Hz bandwidth Spectrum panel. This is sufficient since SIM only decodes 4 modes: SIM31, SIM63, PSK31, PSK63.
- Automated logging is supported via the ADIF format. Optionally, the contact log can be Auto-uploaded to one or more of: eQSL, HRDLog, HAMQTH, or HAMLog using your internet connection.
- Much of a typical QSO can be handled by clicking a handful of buttons with little or no typing. These buttons are similar in concept to predefined macros as used in other programs. They are simpler to use and make it easy to insert custom text in the middle of a QSO.
- There's an option so that SIM QSOs can be fully automated for the station calling CQ. The replying station has to conduct their end of the contact manually. When a contact is concluded, it is automatically logged and the originating station resumes calling CQ. Logging is automatic only for the station that is in Auto-QSO mode, The station that manually answered the call has to click the "Save QSO" button.

**In compliance with ham-radio regulations, it's recommended that you don't leave your transmitter in Automatic-QSO Mode without your presence or leave your station in automatic mode for extended periods of time.**

- A meeting place frequency has been selected for each of the ham bands, and these are available via a list-Box menu. Combined with automatic reporting to PSK-Reporter, this maximizes your chance of finding other SIM users. Currently, most of the stations are in Europe and North America. Example 14067.0 Khz for 20m band.

### **Summary**

All these features combine to make SIM an interesting and easy to use communications program. The software is updated frequently from user suggestions—usually about once a week. See the Installation and Setup section on the page that follows for download instructions.

## System Requirements

If you are already using another sound-card based digital mode, you are all set. SIM can use either the built-in sound card or an external sound card based interface such as: Signalink, RigBlaster, Navigator or a home-brewed interface

- SSB transceiver and antenna.
- Computer running Windows XP or later, as Win Vista, Win7, Win8, Win8.1 and Win10, but it should also run under Linux +Wine, OS-X, and probably FreeBSD and other Unix-like operating systems with windows emulator.
- 1.0 GHz or faster CPU and 100 MB of available memory
- Monitor with at least 1024 x 780 resolution (more is better) (1024X600 pixel format version can be downloaded separately )
- Sound devices supported by your operating system. (48000 Hz raw sampling rate was needed for full decoding performance).
- Audio cable or equivalent USB connection between transceiver and computer.
- Computer-to-radio interface such as a serial port, to switch on/off your PTT line, and/or communicate with the "CAT" control, Or VOX for T/R switching.
- No need to synchronise your computer clock to UTC.

## Installation

1. SIM can be downloaded from the *SIM31Home* page:

<http://www.on4nb.be/sim31.php>

or [http://www.on4nb.be/last\\_release/sim\\_psk.rar](http://www.on4nb.be/last_release/sim_psk.rar)

**NB:** To have the best decoding performance and the newest enhanced options, please make sure to get the newest daily version (V6XXX) available from the SIM31 Home page. Check for new releases at least once a week. Sometimes changes are made that break compatibility between versions.

2. For your installation, download the .rar file, it contains all the supporting files.
3. Manually create an installation directory. Preferably C:\SIM31\ . to avoid permission problems, DO NOT place this directory inside Windows directories.
4. Unzip the .rar file into the new directory. Eight files will be installed.  
sim\_psk.exe : (executable program )  
SIM\_Log\_Viewer.exe (separate program for log viewer)  
ASCII\_Converter.exe (ASCII to Hex converter program)  
pskreporter.dll : (library for PSK-Reporter option)  
HRD5\_InterfaceSIM.dll (Ham radio Deluxe Library )  
sim\_users\_guide\_en.pdf (English user's guide)  
sim\_users\_guide\_fr.pdf (French user's guide)  
SIMCQ.wav (sound alert when a SIM31 frame was received)
5. Manually create a shortcut on your desktop or your taskbar pointing to sim\_psk.exe.
6. Run the shortcut to start SIM.
7. When SIM starts, a pop up window appears allowing you to configure your sound card plus other setting parameters. Details follow.
8. For installing a new updated version, it's quick and easy:  
-Download new sim\_psk.rar file.  
-Unzip sim\_psk.rar at the same old folder.  
- You need to overwrite old files by new decompressed ones.  
No care, all data setting and logged QSO's remain safe and unchanged.

## Interface Settings (Sound Card +Transceiver)

Before starting the program, please check first for the 2 system recommendations follows:

### Raw sampling rate Setting : (Very important)

SIM expects your sound card to do its raw sampling at 48000 Hz, Otherwise decoding performance can be altered. If you are new to digital communications, open your Windows OS sound control panel. Click on "Properties", then "Advanced", and select **“16 bit, 48000 Hz (DVD Quality)”** for both the “Recording” and “Playback” devices.

(Maximum sound hardware acceleration option should be selected on Windows XP )

### Windows system sound inhibit : (Very important)

If you are using the Windows default sound card rather than an external interface, be sure to **turn off Windows system sounds** (By Win mixer), so system sounds are not transmitted over the air.

### Good Advice :

If you're already using another digital communications program, it may help to open its configuration window before starting your SIM configuration and print or write down the settings being used there (COM, Baud, Stop bit, ...).

The configuration window for SIM automatically opens at program start up .

SIM >> GENERAL INTERFACE SETTINGS

Input Sound Driver: Mixage stéréo (IDT High Definition Audio CODEC)

Output Sound Driver: Enceintes / Casque (IDT High Definition Audio CODEC)

Direct Hardware PTT

COM Port: None RTS: PTT DTR: 0

☐ HRD (Ham Radio Deluxe) (CAT) ☐ Use HRD for PTT

☐ OmniRig1 (CAT) ☐ OmniRig2 (CAT) Freq: Mode: default PTT Method: None

☒ DXLab Commander (CAT) Mode: USB ☒ Use Commander for PTT

CAT

☐ Direct CAT Port: COM1 57600 bauds 1 bit stop (Powered USB Cable) ☐ RTS=1, DTR=1

RIG CAT as: ICOM IC-738 INPUT: Microphone ☒ Use CAT for PTT

Manual typed Hexa String for Radio CAT Options Initialising : (Antenna+Power+Filter, ...ect) see your Tx manual

CAT TX ON Hexa String : FE.FE.44.E0.1C.00.01.FD 54.58.3B .. HEXADECIMAL

CAT TX OFF Hexa String : FE.FE.44.E0.1C.00.00.FD 52.58.3B .. HEXADECIMAL

Manual typed Hexa String for Radio CAT Exit Options : refer to your Tx user's guide , Cat Commands

☒ show this window at program startup

RUN Cancel



### **Set Input and Output Sound Driver popup menus**

Select your input and output sound drivers from the lists. If the correct one doesn't appear in its list:

- If it's an external interface, make sure it's connected via USB cable and has power.
- There's a limit of 24 audio drivers listed in this popup, you may need to remove old unused ones to make room for all to show up.

### **Set Direct Hardware PTT (RTS/DTR)**

If you will use RTS or DTR for PTT command (Press To Talk), choose an exclusive serial port being used (com port can be physical or virtual ). Otherwise, leave at the default value (NONE).

### **Set CAT through HRD (Ham Radio Deluxe) :**

Check HRD checkbox, HRD was intended to be already started and correctly configured.

### **SET CAT Through OmniRig engine:**

Check OmniRig1 or OmniRig2 check-Box, then you can setup some more details as main/sub transceiver, SSB\_USB/DIG\_USB modes or PTT method: CAT/RTS/DTR/RTS+CAT/None . OmniRig was intended to be already installed and correctly configured.

### **SET CAT Through CIV-Commander (DXLab suite) :**

Check CIV-Commander check-Box, then you can setup mode USB/DATA\_U and PTT option method: CIV-Commander was intended to be already started and correctly configured.

### **Set Direct CAT**

Check "SET Direct CAT" check-Box.

- a. Select Com port, your transceiver, baud rate, and stop bits. (Check your transceiver settings and manual.)
- b. Select the type of input used for input sound by CAT on your transceiver (microphone, rear panel, digital input .....)
- c. Enable PTT by CAT if needed.
- d. RTS/DTR auto power. Some external USB interfaces require power through the CAT cable.

### **Set Manual Hex String**

This allows you to select special features offered by your transceiver when starting the SIM program (Power, Antenna, Filter, ...). See your transceiver manual. Most operators will leave it empty.

### **Set CAT TX ON and CAT TX OFF**

These fields were filled in automatically when you selected your transceiver in step 5 above. You can edit them if needed for special cases. See your transceiver manual.

### **Set manual CAT Hex String for exit options**

This allows you to reset your transceiver settings when exiting SIM

for special needs (Power, Antenna, Filter, ...). See your transceiver manual. Most operators will leave it empty.

### Displaying the configuration menu at every startup.


At bottom left of the interface settings window, you can uncheck the box once you have SIM well configured. This allows you to do not display the settings window at each program start up.

### Overall test :

To test your configuration, close this window, and call CQ. Check that your transmitter is being keyed and that your Power and SWR meters indicate audio is being transmitted at the expected power level. To check CAT, change the band being used via the popup menu near the upper right of the main window. Your transceiver should change to the new frequency.

If things aren't working correctly, double check the sound card and COM port settings. If still not working, try changing some of the other settings in the PTT and CAT sections one at a time.

### SIM Main Window :

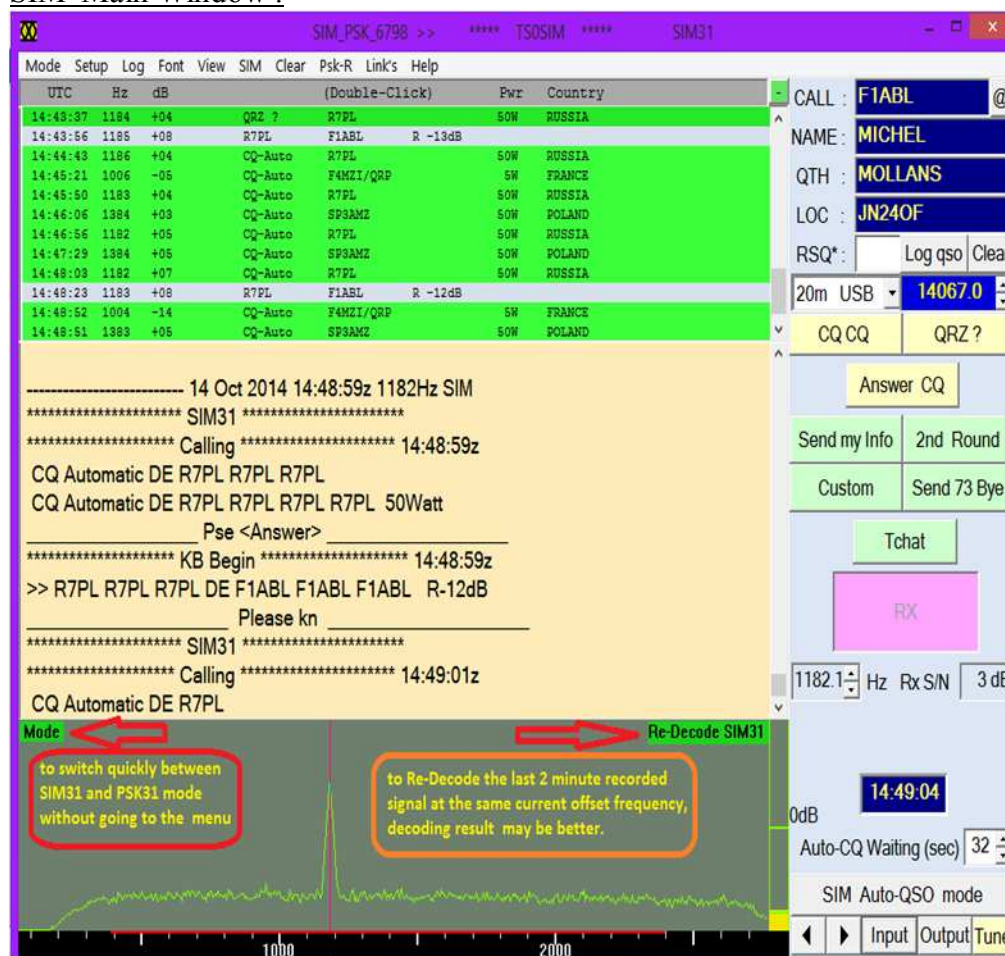


## Set Input signal level

For all digital modes, it's usually best to reduce the Transceiver's AGC gain to the minimum to avoid signal distortion. Other DSP functions can also impact the received signals so turn off all transmit or receive special filters ,compressors and equalizers. SIM31 does all the processing of RX and TX for you, it is VERY important that your Transceiver does not process or alter the TX and RX signal at all. If you are already using another digital mode, you shouldn't have to make adjustments for SIM and you can easily switch back and forth between programs.

For most PC internal sound card's, there is an input amplifier option, it should be disabled at the beginning, otherwise it can distort the input signal before digital conversion .

While receiving a SIM or PSK signal, adjust the input signal level while watching the yellow vertical bar graph (at the right of the SIM Spectrum Window). The signal should no peak more than the middle at the 0dB mark.

The background noise level should be around 20% on the bar graph (the lower green line). If it's too low, decoding performance will be hurt.

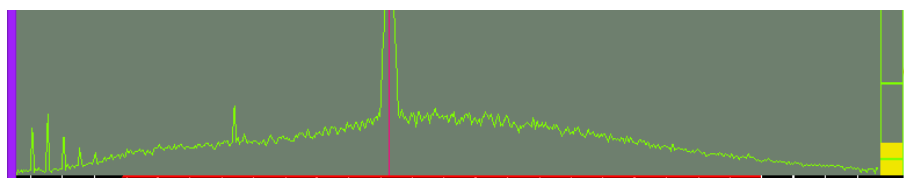

With the same input/output sound card drivers, the optimal settings, once they are done, should remain good for all other digital modes, regardless of the used software.

Any high Input level should be alerted by the program with “ Please Reduce input signal Level” and then background spectrum colour become red.

## Set Transmit Power and Audio Level:

DSP functions can also impact the transmitted signals so turn them all off. If you are already using another digital mode, you shouldn't have to make adjustments for SIM and you can easily switch back and forth between programs

If you are using an external USB sound card interface such as: Signalink, RigBlaster, or Navigator follow their instructions for setting transmit power and audio levels. Adjustments are made in three possible places.

**1-- External Interface.** See the manual for your interface—it may be a manual control on the interface and/or a software control.

**2—PC Internal Sound card.** The volume level as set in the Windows: Sound control panel. You can open it by clicking the “Output” button in the lower right corner of the SIM window.

Increase the mixing control of the audio output to reach the maximum possible RF output example 100 watt, and then decrease the setting until the RF output will fall back to about 30%. This will be a good audio level to drive your TX transceiver. So, 30 Watts will be a good choice for a 100 Watt CW Transceiver.

If you are using a sound card that is also the Windows default audio device, be sure to turn off all Windows sounds so they are not transmitted over the air.

**3-- Power Level slider:** located at the right of main window. A good starting point is the default full power .

The transmit power setting on your Transceiver. If it is rated at 100 watts for CW and USB, the usual **maximum** power for use with digital modes is about 30 watts. With the adjustment above, your power output will be reduced accordingly.

To check the output audio quality and transmit level of your setup, click the "Tune" button on the main SIM screen. Your transceiver will be switched to transmit mode for a few seconds, with a steady audio tone equivalent to the level of a real SIM-31 signal.

Listen to the generated audio tone using the RF monitoring of your radio, or any other method. If your transceiver supports this function look at the transmit ALC and adjust it to zero. This will get the strongest output without distortion or splatter. The tone should be perfectly smooth and constant, with no clicks or glitches. Too high of an audio level can generate spurious signals and interference. **If you use more than about one-third the rated power for digital modes, you are likely to overheat your transmitter, tuner, etc. ,** finally make sure to suppress any unwanted RF signal, which would return back to the transceiver.

SIM31 is a good weak signal mode. Many SIM31 radio operators use much less than the maximum one-third of rated power mentioned above. SIM31 can decode signals as weak as -18dB.

Good digital practice is to use the minimum power necessary to communicate, with good antenna systems long distance communications can be achieved with just 2 or 3 watts.

## Set Your Personal Info

To configure your personal info, select the menu: Setup > Personal info and fill in your personal info: Call, Name, QTH, Grid, Birth Date, Age, Year Licensed, Clubs, Websites, and QSL methods. There is a limit of 12 characters for your Callsign, NAME and QTH. This info will be inserted into Structured Messages.

**SIM31> PERSONAL INFO**

CALL:  (It's better, to avoid as possible the Prefix/Suffix)

NAME:

QTH:  +

GRID:  ☐ Miles for distance

☒ BIRTH:  AGE:  Y YEAR LICENSED:  BIRTH IN XXXX LICENCED: XXXX

CLUBS:   
(Example : SMC#0012 EPC#12365 30MDG#1458 ...)

INFO's : ☒ QRZ.COM ☐ QRZCQ.COM ☐ HRDLOG.NET ☐ HAMQTH.COM ☐ CLUBLOG.ORG

QSL VIA:


☒ DIRECT ☒ BUREAU ☒ E\_QSL.CC ☐ LOTW ☐ SWL Report accepted

Callsign Alerter :

## Set your Station info

To configure information about your station, select the menu: Setting > Station info and select or fill in: Transceiver, Output Power, Antenna, Antenna Height, and additional station info. When you select an entry from one of the popups, it will be sent as a SIM Structured Message rather than as individual characters.

There is also a checkbox to display PSK characters as all upper case on your system rather than as all lowercase.

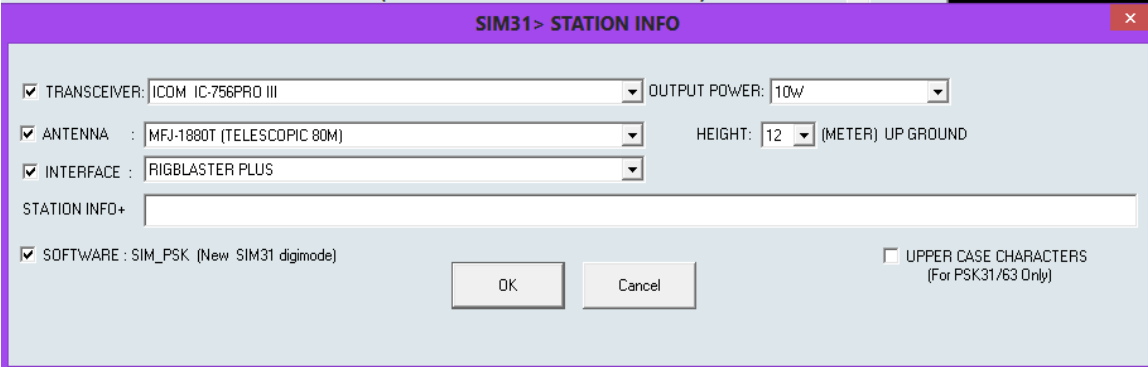


The screenshot shows a dialog box titled "SIM31> STATION INFO". It contains several fields and checkboxes:

- ☒ TRANSCEIVER: ICOM IC-756PRO III
- OUTPUT POWER: 10w
- ☒ ANTENNA : MFJ-1880T (TELESCOPIC 80M)
- HEIGHT: 12 (METER) UP GROUND
- ☒ INTERFACE : RIGBLASTER PLUS
- STATION INFO+ (empty text field)
- ☒ SOFTWARE : SIM\_PSK (New SIM31 digimode)
- ☐ UPPER CASE CHARACTERS (For PSK31/63 Only)
- Buttons: OK, Cancel

## Set your Favourite Language for SIM Messages

To select the language used to display Structured Messages on your system, select the menu: SIM and then one of the listed languages. An operator in Russian can see a Structured Message conversation in Russian while his contact in the USA sees the Structured Message conversation in English.

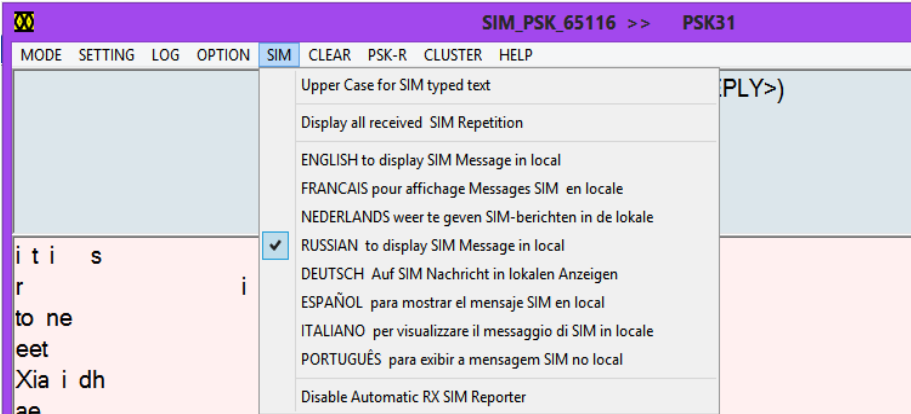

The screenshot shows the "SIM" menu in the "SIM\_PSK\_65116 >> PSK31" interface. The menu options are:

- Upper Case for SIM typed text
- Display all received SIM Repetition
- ENGLISH to display SIM Message in local
- FRANCAIS pour affichage Messages SIM en locale
- NEDERLANDS weer te geven SIM-berichten in de lokale
- ☒ RUSSIAN to display SIM Message in local
- DEUTSCH Auf SIM Nachricht in lokalen Anzeigen
- ESPAÑOL para mostrar el mensaje SIM en local
- ITALIANO per visualizzare il messaggio di SIM in locale
- PORTUGUÊS para exibir a mensagem SIM no local
- Disable Automatic RX SIM Reporter

## Status Indicators


### Mode button:

Changes the current mode from SIM to PSK and back.

### Re-Decode button:

Indicates the current mode and redecodes the last two minutes of signal received on the current accurate offset frequency.

You can redecode at a different offset by left-clicking in the spectrum window for 31 baud, or right click for 63 baud. .

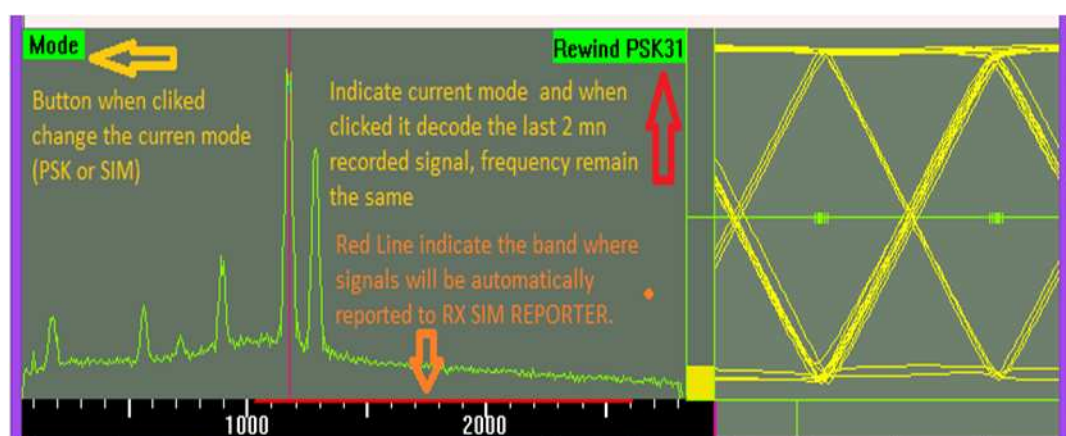

### Red Bar at bottom of Spectrum window:

Signals received in the indicated bandwidth will be decoded automatically, displayed to the upper window and reported to PSK Reporter—if that option is selected in the PSK-R menu.

### Left Clicking in the Spectrum window:

Changes the offset frequency and sets the speed to SIM31 or PSK31

### Right-Clicking in the Spectrum window:

Changes the offset frequency and sets the speed to SIM63 or PSK63

## On-Screen Controls

The screenshot displays a software interface for logging and communication. The top section contains fields for CALL (F1ABL), NAME (MICHEL), QTH (MOLLANS), and LOC (JN24OF). Below these are buttons for Log qso and Clear. The frequency section shows 20m USB and 14067.0. Communication buttons include CQ CQ, QRZ ?, Answer CQ, Send my Info, 2nd Round, Custom, and Send 73 Bye. A Tchat button is also present. A large pink RX button is visible. The bottom section shows a frequency of 1182.1 Hz, Rx S/N, and 3 dB. A digital display shows 14:49:04. The Auto-CQ Waiting (sec) is set to 32. The SIM Auto-QSO mode is active. Navigation buttons include left and right arrows, Input, Output, and Tune.

### Logging Fields panel: Call, Name, QTH, LOC, RSQ\* fields

The logging fields, are automatically filled in during a QSO as the other party sends the appropriate Structured Messages. To work correctly the other operator must have:

- configured the “Personal Info” window
- clicked the “Send my Info” or 2<sup>nd</sup> Round buttons
- selected the “Insert ? Name, QTH, Loc, Age..” checkbox in the “Send my Info” or “2<sup>nd</sup> Round” windows.



### **“Save qso” button:**

This button is enabled at the end of QSO and logs the QSO to the entities selected in the Personal Info window.

### **Clear button:**

This button clears the above fields.

### **Frequency Controls :**

The first control selects a ham band and a predetermined SIM meeting-place frequency. The second control displays the selected frequency and allows it to be adjusted.

### **Yellow buttons:** CQ CQ, QRZ?, ANSWER CQ button

These buttons don't open windows, they transmit preset Structured Messages using SIM varicode.

CQ CQ transmits: CQ de your call sign and transmit wattage (Both as entered in the Station Info window.) You can modify the CQ call in the Setting menu > “Macro's ...” Choices include CQ DX, CQ Asia, among others.

QRZ? : transmits QRZ? de your call sign

ANSWER CQ : transmits the call sign in the CALL field de your call sign

**All three yellow buttons transmit a little more info than described above. Try each of them off the air to see exactly what is being sent.**

### **Green buttons:** Send my Info, 2<sup>nd</sup> Round, Custom, Send 73 bye, and Tchat

These buttons open a window that allow you to select both Structured Messages and to type text. Your choices for Structured Messages can be saved so you only have to configure greetings and good-byes on your first use. During a QSO, if you don't want to change Structured Message or enter text, you can quickly hit the “TX All NOW” button and immediately transmit.

You probably won't use more than two or three of these buttons in a QSO. Between them they offer a lot of overlapping functionality that you can customize to meet your operating style.

Remember that the Structured Messages are sent as a few bytes of varicode rather than letter by letter so the effective speed is much faster than PSK.

The <<name and <<qth buttons will transmit the name and qth of the other contact as received and displayed in the logging panel. This lets the other party know if you received their NAME and QTH correctly.

If you want to enter text, start typing in the text area. Transmission doesn't start until you click the button labelled: "Click this Button to <<Start TX>> while you type". This sends both call signs and any Structured Messages selected above the text area. It then sends the first character of your typed text and pauses. Your typing, the Structured Messages below the text area, and the closing call signs aren't sent until you click the "TX ALL NOW" button. You can edit text until it has been sent.

A good way of using this functionality to speed a conversation is to start typing your reply while you are receiving info from the other party. When the other operator finished, click the Start TX button, finish your reply, and end the transmission with the TX ALL NOW button.

#### **Pink indicator/button RX / Halt TX:**

When this indicator displays RX in disabled-style text, it indicates that SIM is receiving. When this button displays Halt TX, it indicates that SIM is transmitting. Clicking it will abort the transmission.

#### **Hz indicator and selector**

This indicator displays the offset frequency SIM is using for receiving and transmitting. You can use it to fine tune the offset frequency. For example: click in the Spectrum panel to set the offset to 1500 and you'll likely be off a few Hz. Use the up or down arrows to zero in on exactly 1500.

#### **Rx S/N display**

This indicates the signal to noise ratio of the signal being received.

**UTC Time display :** Indicates the current time.

#### **Auto-SIM (sec) indicator and control**

This adjusts the time between CQs when using the SIM Auto-QSO mode.

#### **Auto-SIM QSO's Mode button :**

to setup your station as an automatic SIM station .

**Input and Output buttons:**

The input button opens the Windows sound configuration control panel for input from the receiver. The output button opens the Windows Volume Mixer control panel for output to the transmitter.


**Tune Button :**

Sends a signal to the transmitter so you can check your TX power, your SWR, the clarity of your signal, etc. The length of time for the tune can be set in the Setup menu > "Macro's ...".

## How to select a SIM station for starting a QSO

The easiest and most convenient method to select a SIM station is probably to use the Scan panel (See the screenshot below).

### Scan panel

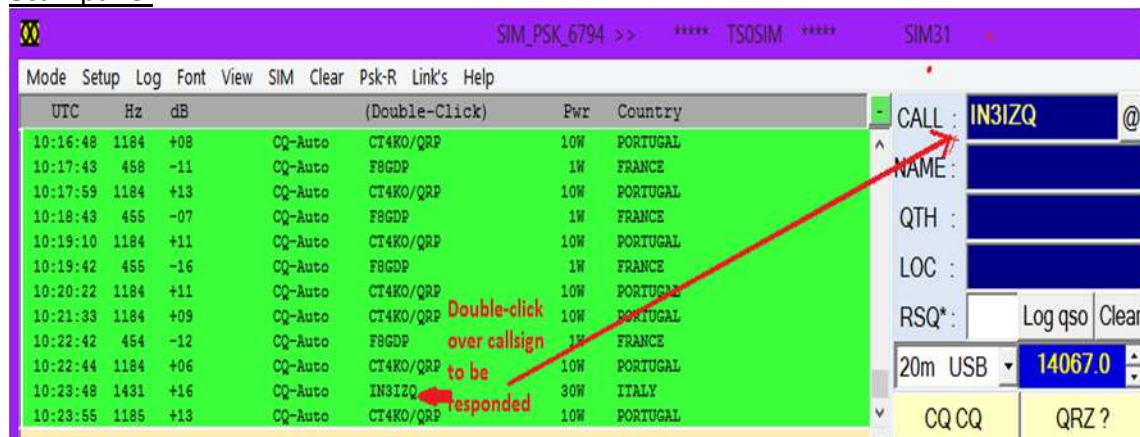

Double-click on a on the most recent occurrence of desired call sign in the Scan Signal Report panel, the program will prepare itself to start a QSO as follows :

- The call sign is copied into the CALL pad for answering.
- Rx cursor is positioned on the spectrum at the right frequency.
- SIM mode and baud-rate are set.
- If you've contacted this station before, your log is used to display the date and other details of your last contact. The Name, QTH, and LOC fields are also populated.

Nothing else to do, just click the < Answer CQ > button to answer the selected station on the air. Just two mouse clicks, without any keyboard entry, are sufficient to start a SIM31 QSO.

- Wait for response.
- If not ok, Click again "Answer CQ" Button and wait until success.

Very easy isn't it ?

As you see, You can make QSOs using nothing more than mouse clicks. We should response to an automatic calling station by the same procedure.

## TX Macro's

*SIM31 mode is mainly a structured message based mode, but it can also handle a classic "plain text" messages.*

A structured message must be preferred here anyway, because it's a lot faster and more robust against noise and large spread distortions. Most classic ham radio messages were prepared in a macro list, and coded as structured binary messages, so they could be sent faster and be less sensitive to noise and QRM.

You can choose your messages to send among the macro list content, simply by selecting each message in a "list-box".

You can also prepare messages in plain text mode, with free content of your choice.

Of course, in this case, as each letter has to be separately encoded, it takes more time for transmitting, exactly like a PSK mode.

Or, it remains possible to type a text in real time, during a contact, at keyboard, exactly like any other classic mode as BPSK31.

## Making QSO's

By long standing tradition and / or legal obligations, a minimal valid QSO requires to exchange call-signs, a signal report, and several other info's which are also generally sent.

SIM-PSK is particularly designed to facilitate such QSOs, thanks to the short structured messages.

But please be fair play, don't initiate an automatic calling before having answered manually to other interesting automatic call-signs on the air.

The process works best if you use the structured formats and follow recommended standard procedures as in the following example.

Example of QSO:

1. **BUTTON CQ CQ :** CQ CQCQ DE ON2VH ON2VHF ON2VHF
2. **BUTTON ANSWER :** ON2VHF ON2VHFON2VHF DE F1ABL  
F1ABL F1ABL R-12
3. **BUTTON MY\_INFO:** F1ABL F1ABL F1ABL DE ON2VHF  
ON2VHFON2VHF RR-9  
Hi dear OM  
Happy to meet you in SIM31 mode  
NAME : LAURENT LAURENT LAURENT  
QTH :  
LOCATOR :  
HW? \*\*\*\*\* BTU \*\*\*\*\*  
F1ABL F1ABL DE ON2VHF ON2VHF PSE  
KN
4. **BUTTON MY\_INFO:** ON2VHF ON2VHF ON2VHF DE F1ABL  
F1ABL F1ABL RR-12  
Hi dear OM LAURENT  
Thank you for call/answer  
NAME : MICHEL MICHEL MICHEL  
QTH :  
LOCATOR :  
HW? \*\*\*\*\* BTU \*\*\*\*\*  
ON2VHF ON2VHF ON2VHF DE F1ABL F1ABL  
F1ABL PSE KN
5. **BUTTON MY\_STATION (ON2VHF).**
6. **BUTTON MY\_STATION (F1ABL).**
7. **BUTTON BYE 73 (ON2VHF)..**
8. **BUTTON BYE 73 (F1ABL). End of QSO**

## Log Book

NB :With automatic QSO mode, the program does collect and save the information's automatically, and then can be uploaded in real time to eQSL.cc , HRDLog.net , HAMQTH.com and HAMLog.eu, or to a local used logbooks as DX-Keeper, Mixw, Logger32, so there is nothing to do manually during an automatic QSO. At the end of automatic traffic, we just need to check and correct manually any possible false infos; afterwards, the Log result can be also uploaded to web ham radio login services, manually via ADIF files.


### Format of a QSO with structured SIM Mode:

All the fields, Call-sign, NAME, QTH, LOCATOR, are initially structured in the program during setup, so, except on errors , the program should get easily and automatically all these info's when receiving a contact, afterwards, it will display them on the screen and will write each info at the right pad, without any operator assistance . You just have to verify their authenticity, and then confirm by manually clicking the button <Save qso> at the end of the QSO....

### Save QSO infos manually :

In some rare case, ( eg for not structured messages, transmitted in plain text mode or by classic BPSK31 mode) you must double click manually, on the strings in order to copy them one by one into their reserved pad's "NAME, QTH, LOCATOR" . Then you will press the button <Save qso>, for saving info's of this QSO into the SIM-Logbook.


Remark: double-click rather on the string NAME before QTH.

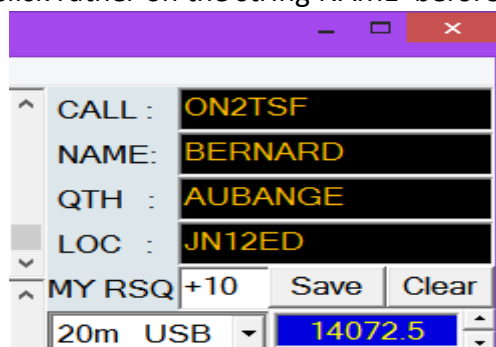

The screenshot shows a software window with a purple title bar. Inside, there are several input fields with labels and values: 'CALL : ON2TSF', 'NAME: BERNARD', 'QTH : AUBANGE', and 'LOC : JN12ED'. Below these is a section labeled 'MY RSQ' with a value of '+10'. To the right of this section are 'Save' and 'Clear' buttons. At the bottom, there are two more fields: '20m USB' and '14072.5'.

Reserved pads:

### Log menu

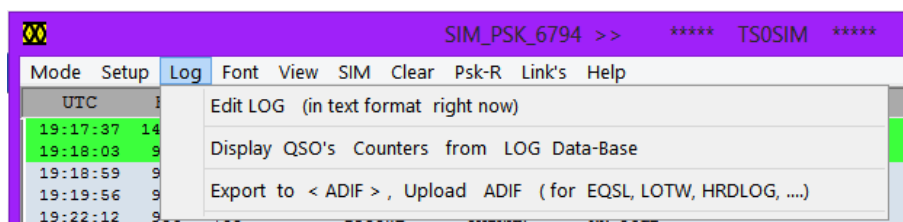

## Special Mouse Commands

SIM RX REPORTER WINDOW	Double-click a desired call-sign on the scanner panel (upper window), the program by itself prepare to answer by settings all required parameters (Call-sign , Mode , baud rate and frequency) so you are ready to click <Answer CQ> button to answer, many times if needed, to start a QSO ...
Received text window	Double click any call-sign on received text, to copy it into the CALL pad before answering.
	Double-click on QTH string to put it into QTH pad (for message insertion and later loggin).
	Double-click on Locator string to put it into LOCATOR pad (for later Loggin).
SPECTRUM ( REWIND )	Left click onto spectrum position: rewinds the last 2 minutes signal recorded and decodes it at 31 bauds default mode : PSK31 or <i>SIM31</i> .
	Right click onto spectrum position: rewinds the last 2 minutes signal recorded and decodes it in 63 bauds default mode (PSK63 or <i>SIM63</i> ).

You are ready to use *SIM-PSK*. Good DX.



## Technical Description

SIM is an experimental amateur radio digital communications program optimized for making weak signal contacts using a narrow bandwidth while decreasing the number of bytes required to send a word. It offers two modes: SIM31 with a bandwidth of only 45Hz and SIM63 which is twice as fast but uses twice the bandwidth. SIM uses the same sound card DSP technology as other digital communications programs.

Distinctive features of SIM are:

- Structured Messaging which compresses frequently used amateur radio phrases to a few characters and translates phrases into the operator's native language. Currently supported languages are: English, Russian, Dutch, Spanish, Italian, German, and Portuguese.

Only lowercase latin characters can be used--even for Russian translation. There are 53 supported characters: A-Z (uppercase only) 0-9 <CR> <SPACE> . , : - = + ? ' ( ) ! / @ # \* Special characters such as "É" are converted to "E"

- An expanded concept of varicode, to encompass not only individual characters but words and phrases."Thanks for coming back to my call." is sent as only 6 characters rather than the 34 Characters required by PSK.

*SIM31*(Structured Integrated Message BPSK31.)

Name of software: *SIM*

Modulation : DBPSK « Differential Binary Phase Shift Keying ».

Speed : 31 bauds , 187 char/min ( or 31.25 wpm).

Pulse shape : Similar to classic BPSK31

Bandwidth : About 45 Hz

It's interesting to note that the CW mode identifier, which is a part of the SIM31 Signal Header during CQing, is limited to the same spectrum bandwidth as the SIM31 signal itself. This means that the CW generated by the SIM31 program is actually narrower than average CW. In other words, it is completely free of key clicks!

Code : "varicode" able to encode characters or messages ( words or full sentences.).

Demodulation : Coherent demodulation .

Synchronization : Automatic on signal

26

## Frequently Asked Questions (FAQ):

### **1/ How I can switch to SIM63 baud rate ?**

Just by clicking the spectrum panel by right mouse button, instead of left right button reserved for SIM31.

Left click mouse button -----→ instantly decoding SIM31.

Right click mouse button ----→ instantly decoding SIM63.

No menu command was needed to switch between SIM31/SIM63.

### **2/ I can receive SIM31 signals but I decode them only 50% of time, how can I fix this ?**

First is to exit all SIM program's and restart again your PC.

Second, The raw sampling rate of your sound card may be not set to 48000Hz, SIM expects your sound card to do its raw sampling at 48000 Hz.

Open your Windows OS sound control panel. Click on "Properties", then "Advanced", and select **"16 bit, 48000 Hz (DVD Quality)"** for both the "Recording" and "Playback" devices.


Exit and restart again SIM program.

(For Windows XP , you need also to enable the Maximum sound hardware acceleration option)

### **3/ How I Can activate CAT commands for My Rig?**


SIM program gives us 4 ways to do it :

- By HRD (Ham Radio Deluxe) if you already use it : just check HRD box , HRD was intended to be already started and correctly configured.
- By OmniRig 1 or 2 if you already use it : just check OmniRig1 or OmniRig2 checkbox, you can then setup some more details as main frequency or sub-frequency , SSB\_USB/DIG\_USB modes or PTT method: CAT/RTS/DTR/RTS+CAT/None . OmniRig engine should be already correctly installed and configured.
- By CIV-Commander if you already use it : just check CIV-Commander checkbox, you can then setup some more details as mode USB/DATA\_U and PTT method: CIV-Commander was intended to be already started and correctly configured.
- By direct CAT commands, then you can choice one of the pre-setting Rigs within the CAT-Rig list, if your rig wasn't listed , you can select the most similar commands rig, otherwise it remain possible to choose manual setting and then typing manually the TX-ON /TX\_OFF commands Hexadecimal Strings for your non listed Rig , please refer to your transceiver manual. It will be nice to send an email to the developer to inform him about your rig missing. [benrejebnizar@gmail.com](mailto:benrejebnizar@gmail.com)

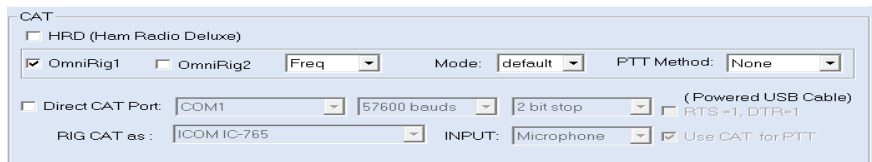

#### **4/ Can I transmit QSL info by structured message?**

Yes we can do it and then we can get better transmission reliability, at "My Info" Tx Macro select → QSL message from the drop list box messages as below :

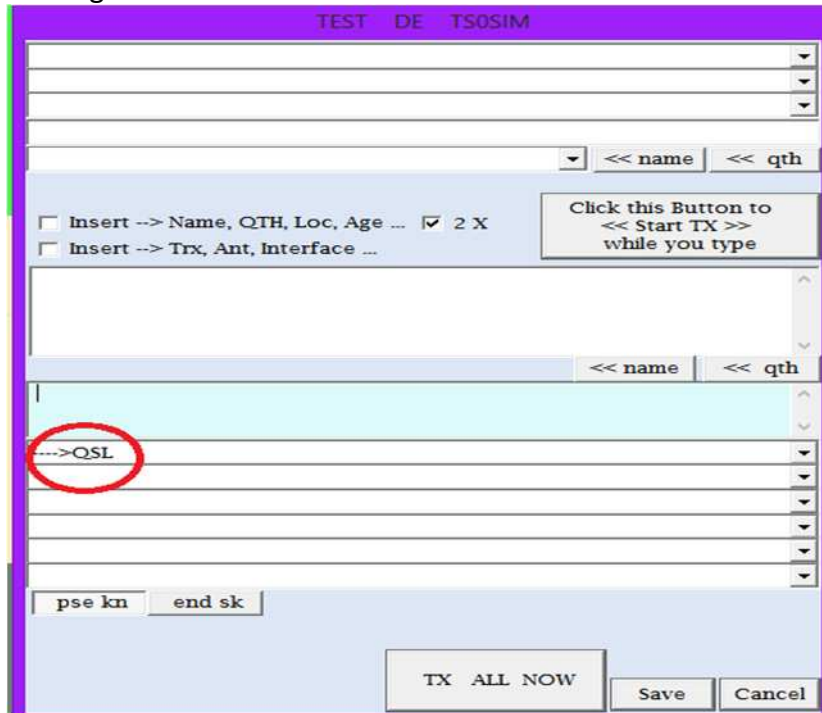

this assumes we have already set our QSL info's in the program setup menu → setting → personal info.

#### **5/ How can I change the font or the size of received text ?**

By menu bar → Font.

#### **6/ How I can answer a received automatic station calling CQ-Auto?**

Only by manual response, similar to normal manual QSO:

- Double-click, by left mouse button, over the call-sign displayed on scan report panel (Upper window) , the program will prepare itself to start a QSO as follows :
  - a/ The call sign is copied into the CALL field for answering.
  - b/ Rx cursor is positioned at the right frequency.
  - c/ SIM mode baud-rate are set.
  - d/ If you've contacted this station before, your log is used to display the date and other details of your last contact. The Name, QTH, and LOC fields are also populated.

- Click “Answer CQ” Button ( Right of main program window).
- Wait for response.
- If not ok, Click again “Answer CQ” Button and wait, repeat “Answer CQ” until success.

## **7/ How SIM automatic mode is running?**

You can convert your station to an automatic station, so no manual action was allowed during automatic mode, your station will do all things for you, during unlimited long time, including :


- Calling CQ-Auto every delayed time.
- Listening for other manual station response +/-15 Hz.
- Checking for correct call received using Checksum.
- Sending a QRZ? Request if call sign is not sure yet.
- Answering by sending info's as a first round.
- Decoding info's of received station.
- Filling log fields by decoded info's (NAME , QTH, QRA LOC, RSQ ... )
- Answering by sending decoded (NAME + QTH) +73 message on second and final round of the automatic QSO.
- Saving automatically QSO info's to the Local SIM-Logbook.
- Saving automatically QSO info's to the other local Logbooks as DX-Keeper, MixW, Logger32 if selected.
- Saving automatically QSO's ,in real time, to web service's Log's if selected and internet was allowed (eQSL.cc, HRDLog.net, HamLog.eu, HAMQTH.com.....) .

## **8/ How Can I put my station on automatic mode ?**

a/ Listen to the band for at least 10 minutes to mark most active frequency's.

b/ Select a free cursor frequency by clicking left button on free spectrum position.

c/ Select a convenient minimum delay between CQ-Auto calling

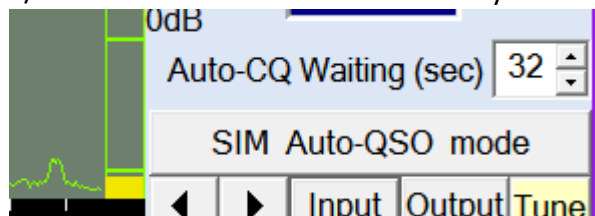

d/ Click “ SIM Auto-QSO Mode” button at left main window.

e/ a popup window will be displayed , then you can Setup info's to be send in first round , Click Ok , and station become totally automatic , don't try to interfere manually , it's not possible, it's all automatic or all manual, no possible mixing the two modes.

### **9/ How can I save My current QSO?**

At the end of a QSO , and after checking for the QSO info's exactitude (NAME, QTH, QRA LOC ....), you can click over "Save qso" Button located on main window and then it ask you to enter some comments and click "OK" Button , then QSO will be stored to the local SIM LogBook , in add the program will try to send them automatically at the desired checked Web Log's (eQSL.cc , HRDLog.net, HamLog.eu, HAMQTH.com ) .

### **10/ How can I edit or modify my SIM-log Book ?**

Menu → Log → SIM-LogBook

### **11/ How can I view my SIM\_logBook separately from program?**

For a separate program viewer of your SIM\_LogBook

Menu → Log → SIM\_LogBook viewer

With this separate program, you can display permanently your LogBook in a free corner of your screen (for who have a large screen) , but only for view , modification are not allowed here.

### **12/ How can I export my QSO's to my favourite Log program?**

All your old SIM QSO's should be saved at the local SIM-LogBook, so you can access to all your old saved QSO's easily any time you want. ADIF file should be the standard method for exporting your SIM31 QSO's to other Log program's.

menu bar → Log→ Export QSO's , a popup window will be displayed , fill in the asked parameters and then Click "Export Selected QSO's" button .

### **13/ How can I save my Local SIM Logbook before formatting a C: Hard Disk ?**

The local SIM logbook data base was in a unique file:

C:\SIM\_PSK31\DataLog\_SIM.dta so just save this file in secure place before formatting your C:\ hard disk , after formatting the disk please replace the saved file to the same folder C:\SIM\_PSK31\ , then your old database QSO's will be recovered .

### **14/ How can I export my old local SIM Logbook when changing for a new PC ?**

Similar to the upper question, is to move the old data base file

C:\SIM\_PSK31\ DataLog\_SIM.dta at the new PC at the

C:\SIM\_PSK31\ folder .

NB: DataLog\_SIM.dta have "read only" file attribute.

### **15/ How can I adjust the Tune length ?**

For Simple click down, Tune button delay should be adjusted from :  
menu bar → Setup → Macros → Tune Length.

NB: Tune Button can be remain clicked down as long time as wanted manually by mouse Button.

### **16/ How my plot can be reported to PSK-Reporter map ?**

Check Menu\_bar → Psk-R → Enable Auto PSK-Reporter  
This need pc already connected to the internet.

### **17/ Can I see who has reported me to PSK-Reporter map ?**

Yes by menu bar → Psk-R → Go to My PSK-Reporter Map.

### **18/ How I can be alerted by a Wanted callsign ?**

SIM program has his own callsign SIM-Alerter :

Menu → Alerter → SIM Alerter

You can be alerted by a Yellow colour when a desired callsign has meet the desired criteria :

- Wanted Continent.
- No worked CQ-Zone.
- No worked ITU-Zone.
- No worked DXCC country.
- No Worked Callsign since .
- Wanted CQ-Zone.
- Wanted prefix.
- Wanted Callsign ...
- ....